

USB VoIP Phone

User Manual



Free calls over internet Caller ID function Easy use

1. Instruction

1.1 Summary

Plugging USB VoIP Phone into your computer's USB port, you can make and receive skype calls. Phone rings for all incoming calls. You can select one from Skype contact list or press SkypeOut numbers to make calls on the phone. With LCD, keypad and ringer, it is easily used as mobile phone.

1.2 Features

1. With LCD, keypad and ringer, easy to use like mobile phone
2. Phone rings for all incoming calls, ring style selectable
3. Caller ID function of skype calls
4. Dial skype contact and Skypeout number by phone keypads
5. Echo cancellation, noise reduction, duplex communication
6. Driver and sound card built-in, no external power required

1.3 System Requirements

1. Windows 2000 or XP
2. 400MHz processor and free USB1.1 or USB2.0 port
3. 128MB RAM and 15MB free disk space
4. Any broadband connection or minimum 33.6 Kbps dialup

1.4 Package Contents

1. One USB VoIP phone
2. One user manual
3. One installation CD

2 Using the USB VoIP Phone

2.1 Keypad Instruction



◀/▶: Left Tab /Right Tab

Press to scroll the Skype tab

▲/▼: Up/Down

Scroll to the contacts.

 : Dial/Answer

Dial out number or Answer a call.

 : Hang up

End talking or refuse incoming call.

C: Delete Key

Delete the inputted wrong number while dialing.

* **+**: In idle mode(LCD displays date), input “+”, else input “*”.

📞: In idle mode(LCD displays date), press to select ring style, else input “#”.

2.2 Run Skype

- Download Skype software and install it (www.skype.com).


The version must be 1.0.0.106 or higher.

- Run Skype and log in with skype account.

You can create a Skype account as shown below:

After software startup, the icon will appear to the system tray as shown below:



That indicates the Skype are successfully connected to Internet. If the icon is shown as , you have to check your Internet connection.


2.3 Connect USB VoIP Phone to PC

 
- When USB VoIP Phone is connected to PC, the LCD shows "VOIP Phone".

2.4 Run SkypeMate

- Insert SkypeMate installation CD or download SkypeMate software, then install it.

■ Run SkypeMate

Double-click the icon  on the desktop, the Skype program will pop up the window as shown below:

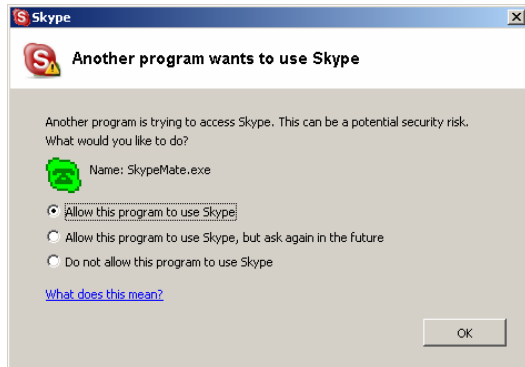


Select the first option “Allow this program to use Skype”, click “OK” button.

Note: If you selected the wrong option, you can make another selection. Please see **2.9. FAQ /problem3** for detail.

After running SkypeMate, the icon will appear to the system tray as shown:




That indicates the device and Skype are connected successfully.

If the icon shown as  (the phone is green and the outside is grey), please run Skype first.

If the icon shown as  (the phone is red and the outside is green),

 
it means USB VoIP Phone connected incorrectly. Please reconnect USB VoIP Phone to PC.


2.5 Call Skype user from skype contacts

- Press ◀(IN) and ▶(OUT) to scroll the Skype tab.
- Press ▲ and ▼ to select a contact.
- Press  to call out.


2.6 Call Skype user by Speed-Dial

- Add "bbc456" to Contacts
- Assign Speed-Dial for it, example "11"

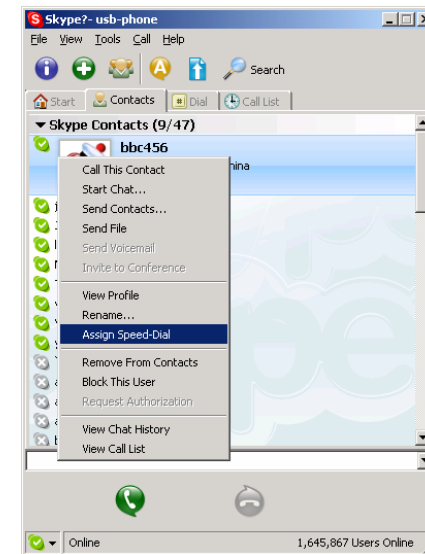


- Input number and make a call:
Press digital "11" on USB VoIP Phone, this number will be shown on Skype window, then press  to call out.

2.7 Call to regular phone

- Press "00"+"country number"+"phone number", then press .

Example: call someone in Beijing, China, please press

00861012345678, and then press .

0086 10 12345678

country code city code destination number

Note: If you want to use this function, you should buy SkypeOut Credit from www.skype.com first.

2.8 Answer a call


When a call comes in, the USB VoIP Phone will ring. Press  to answer the call, or press  to refuse the call.


2.9 FAQ

Problem 1

There is no voice comes out when play music?

Resolution

 Please execute the “Control Panel->Sound and Video () ->Audio”, set **Sound Playback** and **Sound Recording**’s preference device to your sound card, it shown as below:

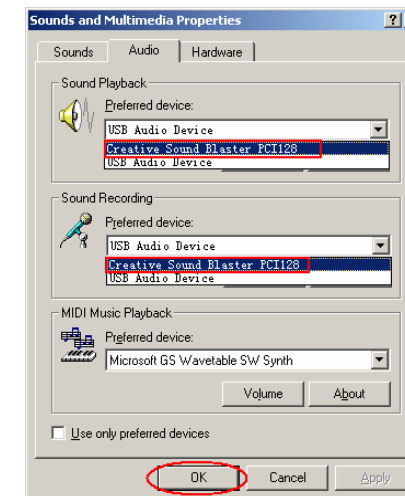


Problem 2

The voice is played from the PC’s sound card instead of the USB VoIP Phone when I make/answer a call?


Resolution

 Execute “Tools->Options->Sound Devices” to open the window as below:

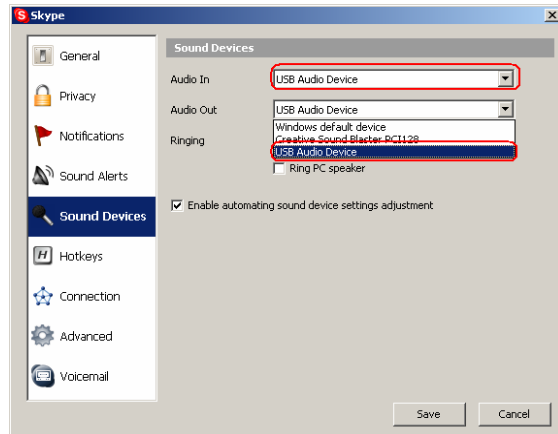

Set “Audio In” and “Audio Out” to “USB Audio Device”.

Problem 3

Skype has been started, but the icon of SkypeMate still shown as  (the phone is green and the outside is grey)?

Resolution

Maybe you have selected the wrong option, you can execute “Tools-> Options-> Privacy-> Manage other programs’ access to Skype”, and then choose the needed option, click “Change” button to open the “Manage API Access Control” windows, and make another selection.

USB VoIP Phone Ver.1.1

2005-8-6